

ADDENDUM to Instruction Sheet of Panel Meter models -
PM-1028A, PM-1028B, PM-1029A, PM-1029B

REVISE Section 4(A) as follows:

Select the maximum measuring range and decimal point setting as follows;

Max. Voltage to be Measured	Voltage Divider Selection	Decimal Point setting method
200mV (<i>default</i>)	0.2V solder points (<i>default</i>)	Jump P3
20V	20V solder points	Jump P2
200V	200V solder points	Jump P1
500V	500V solder points	No Jumper

NOTE: Be sure to **remove** solder from the default (0.2V) solder joints when changing to other ranges. Leaving two or more solder points connected may damage the meter.